


## SNAP-FIT PVC INSTRUCTIONS

**\*\*\* DO NOT SNAP TOGETHER UNTIL TIME OF INSTALL INTO PIT HOLE \*\*\***

**UNREMOVABLE ONCE SNAP TOGETHER!**

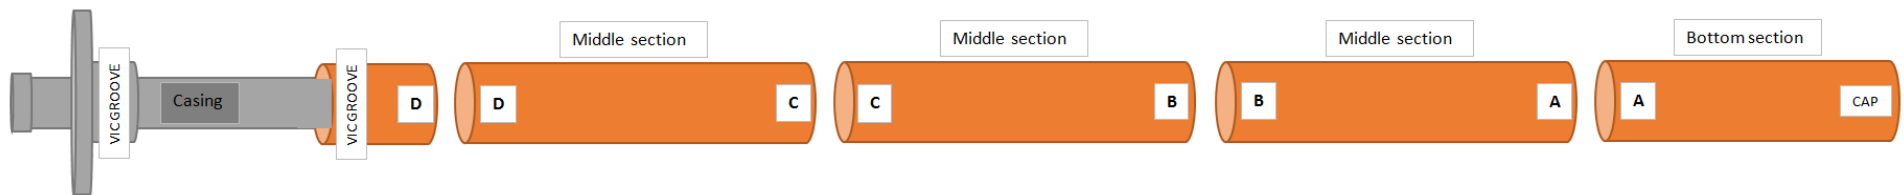

### To install into pit hole:

1. Verify all the pieces are there
2. Lay out PVC - End to End
3. Match the letters (See illustration above A to A, B to B, C to C, etc.)
4. Apply glue to both sides of the A joint (always start with Bottom section of PVC)
5. THEN SNAP TOGETHER, LOWERING PVC INTO PIT
6. Apply glue to both sides of the B joint
7. THEN SNAP TOGETHER, LOWERING PVC INTO PIT
8. Continue until all SNAP-FIT sections are glued (for all the matches of letter)
9. The last step will be to install the Victaulic coupling to fix PVC to jack support plate (no glue on Victaulic coupling)  
*Refer to the Installation Manual of the Single Stage in Ground cylinder (chapter 3.5 "PVC coating assembly")*